Card MP3 Player

Card Shape MP3 User's Manual

The new generation Card shape MP3 Players will be VoiceOver, more easily to find songs! – Same as iPod.Products!

In order to save power consumption, the player designed to plug earphones as a switch, please plug-in jack before player operation, when not in use, earphone be sure to pull away from the player.

WHAT IS MP3/WMA FORMAT

MP3/WMA format files are compressed digital audio files, which consumers can listen with near CD quality.
Commercial CD audio files can be compressed to MP3/ WMA format files. Which are suitable for internet transmission due to their compact size and can be stored in a portable audio device. The users, for example, can record their favorite music album, storing it on board flash or memory card in a digital audio player.

UPLOADING FILES TO THE PLAYER

This player adopts the Windows FAT 16/ 32 file system, it is therefore easy to copy files to and from your player.
To transfer the files between the player and the PC, you need to:

1. Connect the player to the PC (or Notebook) via the supplied Micro USB cable. The new removable drives such as "E" or "F" will appear in the "My Computer" window.
2. MP3/ WMA files can be copied to or from this drive as with any other type drive.

If the computer can not detect a new device, please check the USB socket, or restart the PC.

TECHNICAL SPECIFICATIONS

- Decode: MP3/ WMA format
- Windows compatible file system as removable drivers (FAT 16/32)
- Operating system support: Windows 98SE/ME/2000/XP, MAC 9.2/OS X
- Rechargeable through USB A -Type connector cable
- Size: 85X53X4.5mm
- Weight: 20grams (with battery)
- Power: rechargeable 3.7V 200 mAH Li-ion
- Data transferring interface: USB2.0 High speed
- SNR ratio: up to 80 db
- Earphone O/P: 10mW
- Frequency response: 4~48KHz sampling
- Storage media: on-board flash memory (128MB~16GB available)

Note: Windows 98 need to install vendor driver, product specifications are subject to change without notice.

PRECAUTIONS

The supplier holds no liability for any claims if the product ceases to function correctly due to misuse, because it has been dropped, subjected to violent vibration, extremes of temperature or if any attempt has been made to open the case, apart from the battery cover, to replace battery.

1. Normal vibration will not affect the operation of player. However, dropping or shocking may cause damage to the product.
2. The product is not designed for water-resistant usage. Drenching the product may cause damage.
3. Do not clean up the product with chemicals such as thinners, benzene and alcohol that may deface the surface.
4. Avoid placing the player in places of high humidity or close to a heat source.

WARNINGS

Under copyright law, the user is liable to obtain the license, before playing or recording copyright protected music, except for personal use. That is, if you make one recording only for plating to yourself, or for personal use at home.
This applies to music files on web pages too!
The moment you give only one copy to someone else, you are distributing or duplicating the music and it is no longer for your personal use, you must obtain a license to do this first.

QUESTIONS & ANSWER

NO POWER	Please follow the instructions to charge the battery, and make sure the player is already started.
NO SOUND	Please increase the volume, confirm the music files are not damaged, and connect the earphone to the correct plug.
File transfer procedure does not work	Check the connection of the USB cable, and make sure the storage space is sufficient.
Unable to start	If player can not boot, please restart your computer after the USB connectorplug again.

CHARGING THE BATTERY

To charge the battery using the USB cable between player and computer.
The LED flashing while battery is charging, untill LED stop flashing.
DO NOT power on player while charging the battery.

NOTE: Please fully charge the battery before start using the player.

MINIMUM SYSTEM REQUIREMENTS

- Windows98SE/ ME/ 2000/ XP
- Pentium200MHz or above
- Disk drive 16MB free hard disk space
- 32MB system memory
- USB port（A-Type）

ANNOUNCEMENT

Please follow the instructions to use the player property.
We reserve the right to improve technical design,
and therefore the contents are subject to change without further notice.
If you have any questions, please contact the company dealer.

HOW TO PLAY MUSIC

TO POWER ON

Press and hold ⏯ button until the LED lamp is bright, to power on player.

PLAYING STORED FILES

While the player is idle, pressing ⏯ button will start playback.

TO POWER OFF

Press and hold ⏯ button until the LED lamp is out, to turn it off.
If the player is idle for 60 seconds, it will turn itself off automatically.

PAUSING WHILE PLAYING

Press ⏯ button to pause playback.
Press ⏯ button again to resume playback.

KEY DEFINITION

No.	Key	Description
(1)	⏯ Play	Turn on player Music playback Pause while music playback Turn off player
(2)	Next Folder	Press to next folder
(3)	⏭ Previous	Press jump to previous music
	− Volume down	Press and hold to decrease volume
(4)	⏮ Next	Press jump to next music
	+ Volume up	Press and hold to increase volume

If needs to charge or downloading files, Please use the USB cable to connecting between the player and the computer.

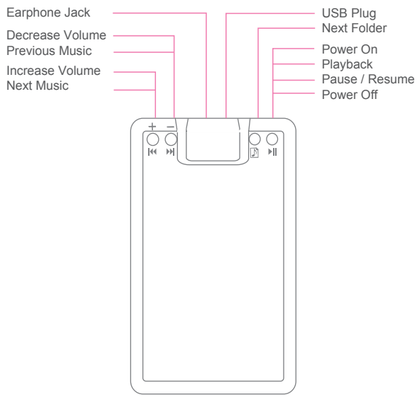

The voice connections "VoiceOver" feature, you can read out the name of the folders, the user can define an name of the folders arbitrary, support Traditional Chinese, Simplified Chinese, English, For example: artist's name, Chinese songs, English songs, Michael Jackson, Classical Music, POP ... and so on.
You can edit up to 70 name of the folders.

The program installation method of voice of the folder' name:
(The tool stored in the disk of player)

(1) Double click MP3 Player Utility Setup_v1.0.0.5.exe

(2) You will find the icon on the desktop of your computer

(3) Double click the icon to "Get File List" and "Select Folder" then "Write to Disk" to complete setup proceed for voice of the folder's name.

LED INDICATOR

Power on	●
Playing	◎
Pause	●
USB Connected	●
USB Transmission	●→◎
Battery Charging	◎
Battery Charged	●

Note:
● → LED Brighting
◎ → LED Flashing

HOW TO RESET

RE-PLUG THE EARPHONETO RESET SYSTEM

Any abnormal connections between the player and the computer, may halt the data transmitting or written error on flash memory. You may need to reset system before continue using the player.
The player may be damaged or suddenly shut-down possibility by the static electricity. Please re-plug the earphone to reset system.
If the computer doesn't detect the player as a new device, please check and re-plug USB cable again or restart your computer.

The transparent plastic box picture for your reference only,
You have the different packing possibility.

PACKING LIST

Please check the following items that can be found in the package.

- Digital Audio Player (on board flash embedded)
- Earphone
- USB Cable
- User's Manual